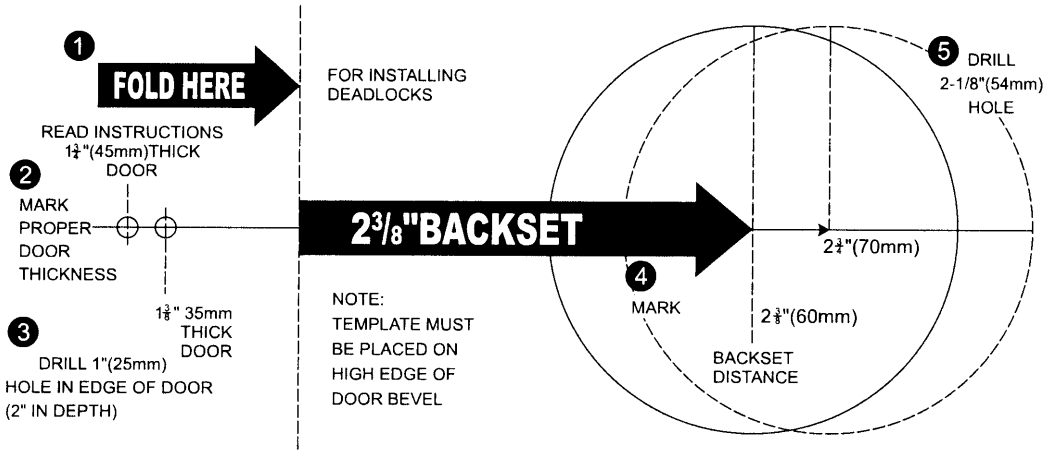
1
FOLD HERE
FOR INSTALLING
DEADLOCKS
READ INSTRUCTIONS
1¾"(45mm)THICK
DOOR
2
MARK
PROPER
DOOR
THICKNESS
1⅜" 35mm
THICK
DOOR
3
DRILL 1"(25mm)
HOLE IN EDGE OF DOOR
(2" IN DEPTH)
2⅜"BACKSET
NOTE:
TEMPLATE MUST
BE PLACED ON
HIGH EDGE OF
DOOR BEVEL
5
DRILL
2-1/8"(54mm)
HOLE
2¾"(70mm)
4
MARK
2⅜"(60mm)
BACKSET
DISTANCE